

**INSTALLATION, MAINTENANCE and USER`S MANUAL**  
**AD-0055/-1155/-900/-1100**

**ADC-0055/-1155/-1133.**

Before starting the installation, read the entire Installation Instruction carefully!!!

**1 INSPECT THE INSTALLATION KIT!**

The installation kit includes:

- 👉 6 pcs Clamps (Fig. 1)
- 👉 1 pcs Protective tape for tailgate
- 👉 0,15 m Butyl tape



Fig. 1

**2 START INSTALLING THE HARDTOP ONTO THE TRUCK BED.**

First clean the truck bed frame, open hardtop back hatch and lift the hardtop carefully onto the cargo bed (Fig. 2) and pull it frontwards until its lower flange goes against the front of the load bin. **Note! Check the brake light on the cabin while mounting the hardtop to prevent collision!**



Fig. 2

**3 ATTACH THE HARDTOP TO TRUCK BED**

Center the hardtop sideways on the load bin and place the clamps acc. to the image. (Fig. 3)

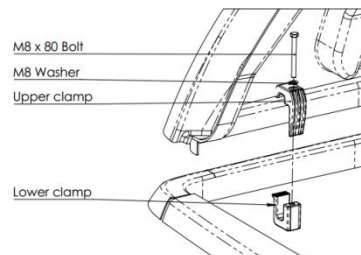


Fig. 3



Fig. 4

Pull the cover towards the edge of the bin with 6 clamps (Fig. 4)

**NOTE! Tension force Max. 10 Nm or 1kg/m**



Fig. 5

If over rail plastic bedliner (Fig. 5) is used it is necessary to drill holes for the clamps.

#### 4 INSTALL PROTECTIVE TAPE ON THE CAR TAILGATE

Clean the car tailgate where the hardtop back hatch sealing touches the car tailgate (Fig. 6) and fasten protective tape to that part.

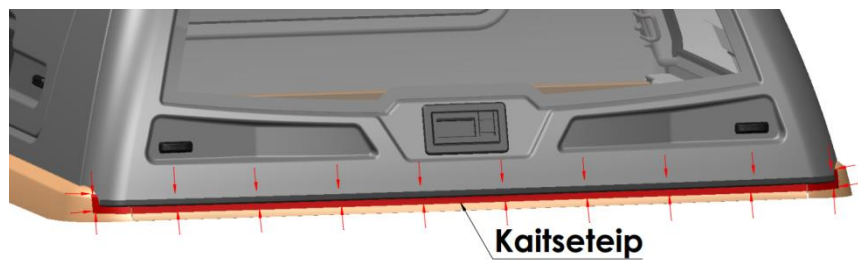


Fig. 6

#### 5 ADJUSTING THE HATCHES

ADC -0055; -1155; -1133

Check that the doors close easily and that the lock is correctly adjusted, if necessary adjust the lock or locking strap. (Fig. 7)



Fig. 7

It is possible to adjust the length of the locking rods by loosening the plastic clip and turning the locking rod which is screwed into the joint against the locking hook. (Fig. 8)



Fig. 8

AD -0055, -1155; -900; -1100

Check that the doors close easily and that the locks are correctly adjusted. If necessary, the height of the glide angle can be adjusted (Fig. 9)



Fig. 9

## 6 INSTALL BUTYL TAPE



Fig. 10

From back corner seal the gap between hardtop and cargo bed (Fig. 10) with a butyl tape or similar sealant.

## 7 MAINTENANCE

- 🔧 To ensure that the door lock system's moving parts function correctly, lock systems should be lubricated at least twice per year. Under difficult conditions such as a dusty environment, then every month is recommended.
- 🔧 Seals should be occasionally lubricated with silicone grease.
- 🔧 Our recommendation is to wax the hardtop with gel coat surface when new, mounted on the vehicle, and then annually to avoid discoloration. Read more: "Maintenance instructions for a hardtop with gel coat surface".
- 🔧 A pressure washer can be used to wash the inside of the hardtop.  
**NB!!! Beware of electrical appendices!**
- 🔧 **NB!!! It is not allowed to step on to the roof!**
- 🔧 **NB!!! Check the wear level of the protective tape for tailgate regularly and replace if needed!!!**

**NB!!! After driving for approximately 6-8 months all connections should be checked and re-tightened, if necessary!!!**