

INSTALLATION, MAINTENANCE and USER`S MANUAL **ID-, IDC-, IE-, IEC-, IEL ja IELC.**

Before starting the installation, read the entire Installation
Instruction carefully!!!

1 INSPECT THE INSTALLATION KIT!

Paigalduskomplekti kuulub:

- 4tk Tõmbe-klambrid 2,0 kabiin autole (Fig. 1)
- 6tk Tõmbe-klambrid 1,5 kabiin autole (Fig. 1)
- 1 tk Kaitseteip auto kastile
- 0,1 m Butüülteip



Fig. 1

2 START INSTALLING THE HARDTOP ONTO THE TRUCK BED.

If over rail plastic bedliner is used, start by disassembling the plastic plugs (Fig. 2) that holds the bedliner.



Fig. 2



Fig. 3

Clean the truck bed frame, open hardtop back hatch and lift the hardtop carefully onto the cargo bed (Fig. 3) and pull it frontwards until the back hatch fits well against the tailgate. **Note! Check the brake light on the cabin while mounting the hardtop to prevent collision!**

3 ATTACH THE HARDTOP TO TRUCK BED

Center the hardtop sideways on the flap and place the clamps in the holes on the flap liner (Fig. 4) and pull the



Fig. 4

cover towards the edge of the bin with clamps (Fig. 5). 4 pcs on Crew Cab and 6 pcs on Extended Cab.


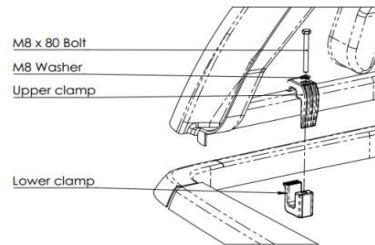


Fig. 5

NOTE! Tension force Max. 10 Nm or 1kg/m

4 INSTALL PROTECTIVE TAPE ON THE CAR TAILGATE

Clean the car tailgate where the hardtop back hatch sealing touches the car tailgate (Fig. 6) and fasten protective tape to that part.

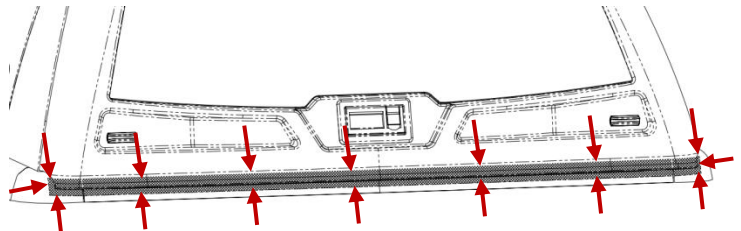

5 ADJUSTING THE HATCHES

IDC-, IELC -0055; -1155; -1133

Check that the doors close easily and that the lock is correctly adjusted, if necessary adjust the lock or locking strap. (Fig. 7)



Fig. 7

IEC-

Check that the doors close easily and that the lock is correctly adjusted, if necessary adjust the lock or locking strap. (Fig. 8)

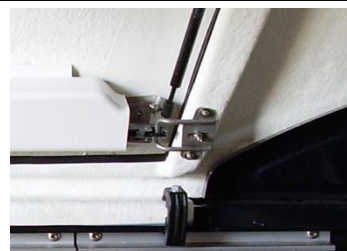


Fig. 8

It is possible to adjust the length of the locking rods by loosening the plastic clip and turning the locking rod which is screwed into the joint against the locking hook. (Fig. 9)



Fig. 9

ID-, IE, IEL -0055, -1155; -900; -1100

Kontrolli, et luuke on lihtne sulgeda ja et lukk on korrektselt reguleeritud. Vajadusel reguleeri liigenurka. (Fig. 10)



Fig. 10

6 INSTALL BUTYL TAPE



Fig. 11

The strip of butyl tape included in the mounting kit can be used to seal the caps between the two sealing strips in the front corners (Fig. 11).

7 MAINTENANCE

- 🔧 To ensure that the door lock system's moving parts function correctly, lock systems should be lubricated at least twice per year. Under difficult conditions such as a dusty environment, then every month is recommended.
- 🔧 Seals should be occasionally lubricated with silicone grease.
- 🔧 Our recommendation is to wax the hardtop with gel coat surface when new, mounted on the vehicle, and then annually to avoid discoloration. Read more: "Maintenance instructions for a hardtop with gel coat surface".
- 🔧 A pressure washer can be used to wash the inside of the hardtop.
NB!!! Beware of electrical appendices!
- 🔧 **NB!!! It is not allowed to step on to the roof!**
- 🔧 **NB!!! Check the wear level of the protective tape for tailgate regularly and replace if needed!!!**

NB!!! After driving for approximately 6-8 months all connections should be checked and re-tightened, if necessary!!!